

Contents

Introductory pages

About this manual	0-5
Introduction to the Toyota Camry and Aurion	0-5
Vehicle identification numbers	0-6
Recall information	0-7
Buying parts	0-9
Maintenance techniques, tools and working facilities	0-9
Jacking and towing	0-16
Booster battery (jump) starting	0-17
Automotive chemicals and lubricants	0-18
Conversion factors	0-19
Fraction/decimal/millimetre equivalents	0-20
Safety first!	0-21
Troubleshooting	0-22

Chapter 1

Tune-up and routine maintenance	1-1
---------------------------------	-----

Chapter 2 Part A

Four-cylinder engines	2A-1
-----------------------	------

Chapter 2 Part B

V6 engine	2B-1
-----------	------

Chapter 2 Part C

General engine overhaul procedures	2C-1
------------------------------------	------

Chapter 3

Cooling, heating and air conditioning systems	3-1
---	-----

Chapter 4

Fuel and exhaust systems	4-1
--------------------------	-----

Chapter 5

Engine electrical systems	5-1
---------------------------	-----

Chapter 6

Emissions and engine control systems	6-1
--------------------------------------	-----

Chapter 7 Part A

Manual transaxle	7A-1
------------------	------

Chapter 7 Part B

Automatic transaxle	7B-1
---------------------	------

Chapter 8

Clutch and driveaxles	8-1
-----------------------	-----

Chapter 9

Brakes	9-1
--------	-----

Chapter 10

Suspension and steering systems	10-1
---------------------------------	------

Chapter 11

Body	11-1
------	------

Chapter 12

Chassis electrical system	12-1
---------------------------	------

Wiring diagrams

12-15

Index

IND-1
